MIDMARK®

INSTALLATION INSTRUCTIONS FOR TIMER ASSEMBLY USED ON THE MODEL M7

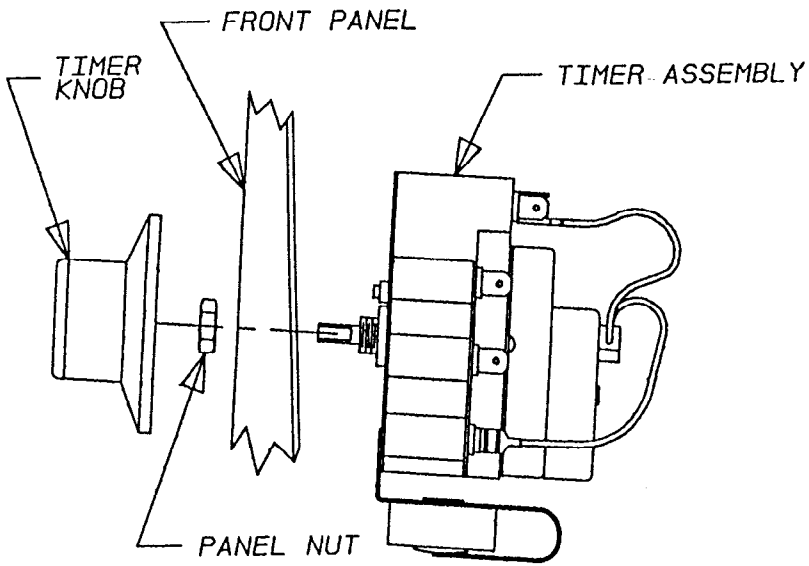

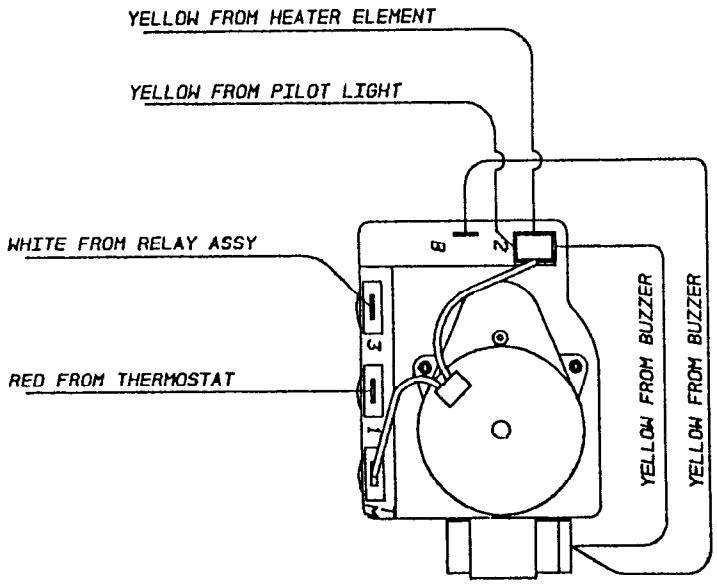

BUZZER

FOR UNITS PRIOR TO SERIAL #:

RB008107	CR001131
CS001695	CP001062

NOT INCLUDING UNITS WITH SERIAL #:

RB007500 THRU RB007999

INSTALLATION:

1. Make sure power cord is unplugged.
2. Remove all wires connected to the old timer. Remove timer knob and panel nut from front panel. The old timer should now be free for removal.
3. Align threaded bushing and pin on front of new timer assembly with holes in front panel. Thread panel nut onto bushing, as shown, and tighten against front panel.
4. Connect wires with new timer assembly as shown in diagram. Yellow buzzer wires are interchangable.
5. Place original knob onto timer shaft on the front panel.

Midmark Corporation, Versailles, Ohio 45380 U.S.A.
937-526-3662 FAX 937-526-5542

ALL PRODUCTS SUBJECT TO IMPROVEMENT CHANGES WITHOUT NOTICE!
LITHO IN U.S.A. INDUSTRY CODE 0251 003-0635-00 (REV. B)
COPYRIGHT BY MIDMARK CORPORATION - 1992